


INSTRUCTIONS

Please read each step before you attempt to set up. Save these instructions for future reference. Return the Warranty Card within 10 days of purchase.

HOW TO SET UP

Note: First time attachment is required.


Top and frame are shipped unattached to avoid damage. A first time set up requires the two frames to be attached together and the top to be attached the frame. This first time set up takes a few minutes. Once top is permanently attached to frame, set up and take down are easily accomplished within seconds.

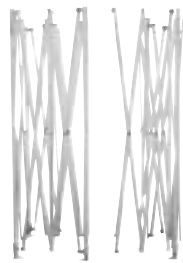


* **1.** With a partner, gently expand the main frame and sub-frame to approximately half of its fully opened position. Face open ends of trusses toward each other.



* **2.** Attach the main frame to the sub-frame at six points. The outside end of each truss is marked with either an "A" or a "B" label. Locate these labels as well as the "A" "B" labels on the main frame angle brackets. Attach each "B" truss to the adjoining "B" bracket with the bolts provided. Insure that the "B" label on the truss actually touches the "B" label on the bracket and tighten the bolts securely with included Allen wrench. Repeat this procedure for the "A" label. Snap in the plastic end caps securely.

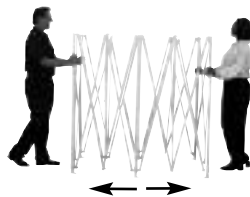

3. Place your E-Z UP® Instant Shelter® frame in the center of area to be shaded. With partner on opposite side, grasp outer legs, lift off the ground, and step backwards stopping at full arms' length - approximately 3/4 its total size.

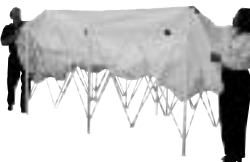

* **4.** Gently unfold the fabric top and place it over the open shelter. Align the four corners of the top over the four corners of the frame.



* **5.** Attach the top to corners of the frame by matching Velcro® strips on the top with the Velcro® strips on the frame. Push the Velcro® firmly together at each corner.




* **6.** To secure the top to frame, align each grommet hole on valance with the bolts in frame.



* **7.** With wrenches provided, remove the nut from each bolt (one at a time) and pull bolt out completely while holding trusses, washer spacer and angle bracket in place. Line up fabric top grommet hole with the trusses and slide bolt through all parts.




* **8.** Put nut back on bolt located on the inside of the trusses. Tighten nut until snug and grommet can still rotate without a great deal of free play. Repeat on all remaining grommets.

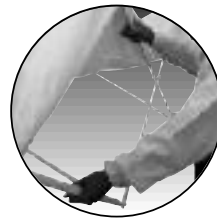

9. Grasp the top and bottom of the diamond shaped area of trusses on the opposite 10' sides of shelter. Lift up and continue stepping backward until shelter is fully opened. **Be careful not to pinch fingers.**



10. In order to ready auto slider, first unattach top by pulling Velcro® corners away from the frame. Engage auto slider at each corner by pushing up on trusses while holding down on top of leg with other hand until snap button engages. Pull down hem of top and repeat on other legs.

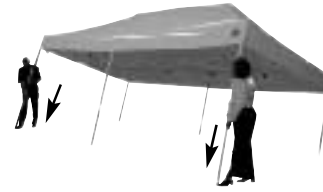


11. With partner, lift up two adjacent outer legs and slide out the inner legs until snap button locks. Repeat on opposite legs as well as center legs. **Be sure to adjust two legs at one time to avoid frame damage.**

***NOTE:** ONCE TOP IS PERMANENTLY ATTACHED, ONLY PERFORM STEPS 3 AND 9-11 TO SET UP.

HOW TO TAKE DOWN




1. Depress snap button on center leg and telescope inner leg into outer leg.

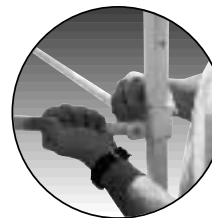

2. With partner standing outside of unit and on same side of frame, depress corner snap button on legs and telescope inner legs into outer legs. Repeat steps 1 and 2 on remaining legs.

3. Release auto slider at each corner by first lifting hem of top and pushing up slightly on frame with one hand while using other hand to depress and release snap button. Grasp the top and bottom of the diamond shaped area of trusses, on the opposite 10' sides of shelter, lift shelter up slightly and shake while stepping towards one another.

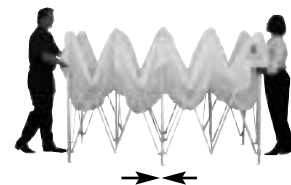

4. Grasp adjacent outer legs and gently push shelter together until fully closed. **Be careful not to pinch fingers!** Place cover bag over shelter.

IMPORTANT INFORMATION

IMPORTANT! Read this information before proceeding. It is the user's responsibility to take the following precautions at all times.

- Use caution when handling the E-Z UP® folding frame. Avoid pinching hands or fingers as frame opens or closes.
- Always stake or weight down your E-Z UP®. Do not use in any potentially windy or rainy weather. Wind and rain can damage the E-Z UP® Instant Shelter® and may also result in injury to you or others. Therefore, do not rely on shelter for protection in heavy or prolonged rain storms.
- Do not use shelter in a lightning storm.
- The E-Z UP® Instant Shelter® is designed as a temporary shelter. Do not leave up for extended periods.
- Do not leave your E-Z UP® Instant Shelter® unattended.
- Keep all flame and heat sources away from fabric top. Do not build fires within shelter enclosure.

Fire retardant - meets CPAI-84 requirements.

CARE AND MAINTENANCE

For long lasting durability and the best possible protection for your E-Z UP® Instant Shelter®, follow these E-Z care and maintenance instructions:

- Use a mild soap (not detergent) and plenty of water for top cleaning.
- Let the E-Z UP® top and frame dry completely before closing or storing to avoid mildew.
- Frame will operate and look better if occasionally wiped with silicone spray, especially before and after use in damp conditions. Remove excess silicone residue before applying top.
- Use a seam sealer if top leaks or drips water. Available at most sporting goods or hardware stores.
- Slightly tighten bolts if frame becomes loose.

Customer Service Hot Line
(800) 235-5637