

**BUNGALOW**®  
by E-Z UP

13'x13'·16'x16'

OWNERS MANUAL



## THANK YOU...

for your purchase of the Bungalow by E-Z UP®. For over 20 years, E-Z UP® customers have been thrilled with their E-Z UP® experience.

To ensure your

complete satisfaction, take the time to learn how to operate the Bungalow® by carefully reviewing these set-up and care instructions.



## TABLE OF CONTENTS

---

Intro.....	2
Set-up Instructions.....	3
Care and Maintenance.....	7
Important Information.....	7
Take Down Instructions.....	8
Accessories.....	10
Warranty and Registration.....	11

# INSTRUCTIONS

Please read each step before you attempt to set up. Save these instructions for future reference.

## **NOTE - First time top and frame attachment is required**

Top and frames are shipped separately to avoid damage. A first time set up requires that the main frame and sub frame be assembled together and the top to be attached to the frame. This first time will take longer than future set ups. Once top is permanently attached to frame, set up and take down can be easily accomplished within minutes.

## STEP 1

With a partner, gently expand the main frame and sub-frame to approximately half of its fully opened position. Face open ends of trusses toward each other.



## STEP 2

Attach the main frame to the sub-frame at four points. The outside end of each truss is marked with either an "A" or a "B" label. Locate these labels as well as the "A" "B" labels on the main frame angle brackets. Attach "B" truss to the adjoining "B" endcap with the bolts and tools provided. Attach eyelet of cable as shown. Tighten the bolts securely. Do not over tighten bolts - ensure they can still rotate easily. Repeat this procedure for the "A" label.



## STEP 3

When attaching part "A" to part "B", ensure the cables are attached as shown.



## STEP 4

Use the bolts and tools provided to connect the part "B" peak assembly to the part "A" hub in three locations.




## STEP 5

Place your Bungalow® by E-Z UP® frame in the center of area to be shaded. With one or two partners on opposite sides, grasp outer legs, slightly lift shelter off the ground and step backwards stopping at full arms' length.



## STEP 6

Unfold the fabric top and place it over the open frame. Align the six corners of the top over the six corners of the frame.

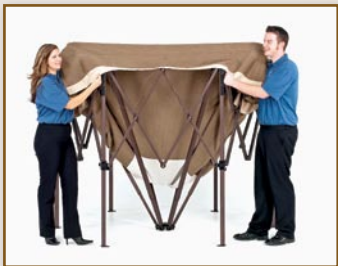

## STEP 7

To secure the top to frame, align grommet holes on valance with bolts in frame.



## STEP 8

Unscrew top attachment nut from bolt. Place grommeted fabric top over the bolt, install top attachment nut and tighten until snug. Top should rotate easily - **Do not over tighten.** Repeat on remaining grommets.



## STEP 9


With partner, grasp the bottom of the diamond shaped area of trusses on opposite sides of the shelter. Lift up and with partner begin to open shelter by stepping backwards stopping at no more than one arms' length each.



**IMPORTANT:** If shelter starts to distort, return shelter to hexagon shape, and repeat step 9. Complete steps 9A - 9D.

## STEP 9A

Move to the next adjacent side, with partner moving to the opposite side. Lift up and with partner A., continue to open by stepping backwards no more then one foot each.

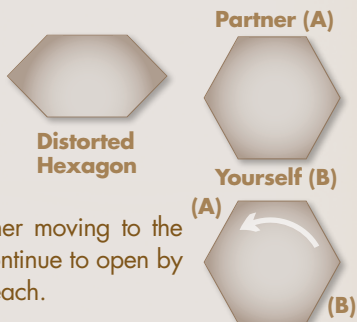

## STEP 9B

Move to the next adjacent side with partner A., moving again to the opposite side lift up and continue to open by stepping backwards no more than one foot each.



## STEP 9C

Move to next adjacent side. Shelter should be very close to being open. Do not force shelter open. Smaller steps will prevent frame distortion. **When shape starts to distort, you have gone too far.**



## STEP 9D

You may need to continue to repeat steps 9A or 9B until shelter is fully open.



## STEP 10

Engage the Auto Slider® at each corner by pushing up on trusses with one hand while holding down the top of the leg with other hand. The quick pin will engage the hole.



## STEP 11

Use peak extension pole to push up center hub, extending top frame structure. Push up until two inner peak tubes lock. Continue push up motion until all six sides snap in place.

**WARNING:** Do not let go of center hub until at least two sides are locked. Complete peak structure must be locked before using shelter.



## STEP 12

Secure the top to the frame by pulling the hem down and matching Quick Attachment Straps on the top with the Quick Attachment Strips on the frame. Push the Quick Attachment Straps firmly together at each corner.



## STEP 13

Secure all inner peak tubes with quick release pins.



## STEP 14

Carefully lift up adjacent outer legs and slide out the inner legs until snap button locks. Repeat on opposite legs. Be sure to adjust two legs at a time to avoid frame damage.



## STEP 15

Once the shelter is fully raised to the desired height setting, secure all legs with quick release pins.



**NOTE:** Once top is permanently attached, only perform STEPS 1 and 9 - 15 to set up.

## CARE & MAINTENANCE

**For long lasting durability and the best possible protection for your Bungalow® shelter, follow these care and maintenance instructions:**

- Bungalow® Sunbrella® top features a soil-and stain-resistant finish that makes clean-up a breeze. Spot wash by sponging briskly with a soapy solution of natural soap in lukewarm water. Rinse thoroughly with clean water to remove soap and air dry. For stubborn stains, use a fabric spot remover. Follow directions on container. Rinse thoroughly with clean water and air dry.
- Let the Bungalow® top and frame dry completely before closing or storing to avoid mildew.
- Frame will operate and look better if occasionally wiped with silicone spray, especially before and after use in damp conditions. Remove excess silicone residue before applying top.
- Use a seam sealer if top leaks or drips water. Available at most hardware or sporting goods stores.
- Slightly tighten bolts if frame becomes loose.

## IMPORTANT INFORMATION

**IMPORTANT: Read this information before proceeding. It is the user's responsibility to take the following precautions at all times.**

- Use caution when handling the Bungalow® folding frame. Avoid pinching hands or fingers as frame opens or closes.
- **Always stake or weight down your Bungalow®.** Do not use in any potentially windy or rainy weather. Wind, rain and snow can damage the Bungalow® and may also result in injury to you or others. Therefore, do not rely on shelter for protection in heavy or prolonged weather storms.
- Do not use shelter in a lightning storm.
- The Bungalow by E-Z UP® is designed as a seasonal shelter.
- Keep all flame and heat sources away from fabric top. Do not build fires within shelter enclosure.

# TAKE DOWN INSTRUCTIONS

## STEP 1

With partner, disengage quick release pins. Depress snap button toggle on legs and telescope inner legs into outer legs. Repeat on other legs, making sure to do two legs at a time.



## STEP 2

Stand under shelter and locate center hub. Disengage quick release pins. While holding center peak pole, release top frame inner peak beams by pushing snap buttons one at a time on all top frame inner peak beams to disengage.

**WARNING:** After all peak beam assembly snap buttons are released GENTLY lower center hub. Center hub should drop down in an inverted position and rest near the ground.



## STEP 3

Release Auto Slider® at each corner by first lifting hem of top. With one hand, push up on truss near slider, release quick pin by pulling ring.



## STEP 4

With one or two partners at opposite sides of shelter make sure peak beam assembly snap buttons are disengaged. Lift shelter up slightly and shake while stepping toward one another until shelter is fully closed. Be careful not to pinch fingers. Store shelter in cover bag.



# ACCESSORIES



**SUN SCREEN**



**VENT TOP**



**SCREEN ROOM**



**DELUXE STAKE KITS**



**CONVERTIBLE SIDEWALLS**



**DELUXE  
WEIGHT  
BAGS**



**ACCENTED  
TIE-BACKS**

# 10 YEAR WARRANTY\*

**For long lasting durability and the best possible protection.**

**INTERNATIONAL E-Z UP, INC.**, manufacturer of the Bungalow<sup>®</sup>, warrants to the original purchaser who provides a dated sales receipt, each part of the Bungalow<sup>®</sup> frame to be free from defects in material or workmanship for a period of ten years after the date of original purchase. \*The Sunbrella<sup>®</sup> fabric is guaranteed by Glen Raven, Inc. for a period of five years after the date of original purchase. This warranty applies only for normal and expected uses, as determined by the manufacturer.

**INTERNATIONAL E-Z UP, INC.**'s obligation and liability under this warranty is limited to the repair or replacement (at its option) of the product or its parts, after its own review and examination.

**RETURN ADVISORY** - Before returning any part or product to INTERNATIONAL E-Z UP, INC. or its designated representative, please phone or write to obtain specific return shipping instructions. All shipping costs must be prepaid, and INTERNATIONAL E-Z UP, INC. is not responsible for products damaged in transit.

**CONDITIONS** - This warranty shall be void as to any product which has been altered or modified in any manner. This warranty does not apply to damages caused by wind, rain, or other forces of nature, not to accidental or deliberated damage of the product, nor to use of the product that does not conform with the product instructions. This warranty is provided in lieu of all other warranties, expressed or implied.

## PRODUCT REGISTRATION

**For fast online registration:**

Login: [www.bungalowbyezup.com](http://www.bungalowbyezup.com) / Click and enter registration button

**For fast phone registration:**

Call: 1-888-474-3583 / Customer Service - Reference: New Registration



**INTERNATIONAL E-Z UP, INC.**

Worldwide Corporate Headquarters  
1601 Iowa Avenue  
Riverside, CA 92507

888.474.3583

[www.bungalowbyezup.com](http://www.bungalowbyezup.com)