


What's in the Box

Please read each step before you attempt to set up. Save these instructions for future reference. Return the Warranty Card within 10 days of purchase.


- 1 9.5' x 9.5' Pyramid™ Frame
- 1 Carry Bag
- 1 Pyramid™ Top (with attachment hooks)
- 4 Piece Stake Kit

How To Set Up


Important: The first time you set up your Pyramid™, the top must be hooked onto the frame. After performing Step 1 below, unfold the Pyramid™ top and drape over partially opened frame. Locate the attachment hook on each corner of the Pyramid™ top and clip into the hole located on frame just below corner caps on each leg. (See illustration below). Continue with steps 2-7.

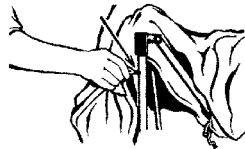


1 Place E-Z UP® Pyramid™ in center of area to be sheltered. Remove carry bag. With partner on opposite side, grasp two outer legs, slightly lift off ground and step backwards stopping at full arms' length.

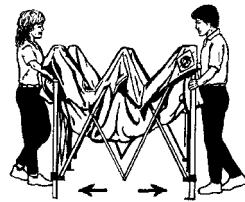


2 Grasp the top and bottom of the diamond (shown), on opposite sides. Lift up and push hands together while stepping backwards until shelter is fully opened. Be careful not to pinch fingers or pull backwards too hard as it will bend trusses.

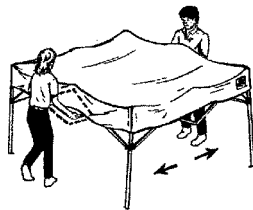


3 Engage the auto slider at each corner by pushing up with one hand while holding down top of leg with the other hand. Snap button will engage in hole. Repeat on all other legs.

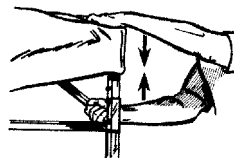


4 Lift two adjacent outer legs up and pull out the inner legs until snap button locks.

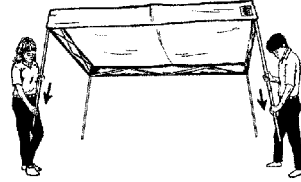


5a Before adjusting other legs, stand under shelter and locate flex rod sets clipped to inside of trusses. Remove flex rod sets from clips. Lengthen flex rod by connecting rods at center metal divider.

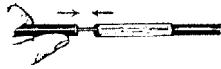


5b Firmly insert end of flex rod that is attached to frame in plastic corner bracket holes. Upon insertion, all four rods should point at each other.

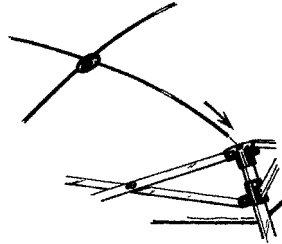

6 Locate flex rod with center hub attached to end. Connect other three flex rods into center hub. Be sure all flex rods are fully inserted into both the center hub and the corner plastic leg caps.

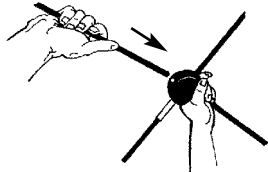


7 Lift up the remaining two outer legs and pull out the inner legs until snap button locks. Use the stakes to secure your E-Z UP® Pyramid™ in windy conditions.

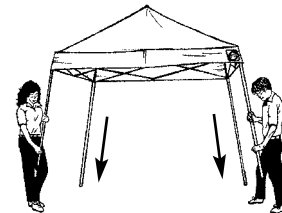


How To Take Down


1 Lift two adjacent outer legs slightly, depress snap button, telescope inner legs up into outer legs.

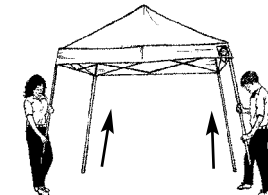


2 Before adjusting other legs, detach three flex rods from the center hub, remembering one rod remains attached to the hub. Pull out rods from four corner bracket holes. Disconnect each rod set at center metal divider, fold flex rod in half, and clip rod end into retaining clips located on the trusses.

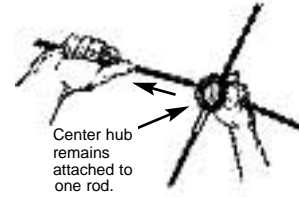


3 Lower the remaining legs.

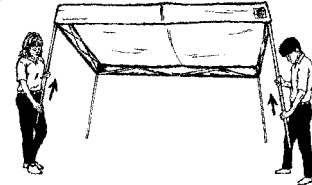


4 Release the auto slider at all four corners by a slight upward pressure with one hand while depressing snap button to release slider. Push slider down past snap button.

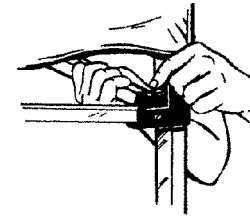

5 Grasp top of diamond on opposite sides and slightly lift up. Shake canopy a little, pulling hands apart, while stepping towards partner until unit is 3/4 closed.

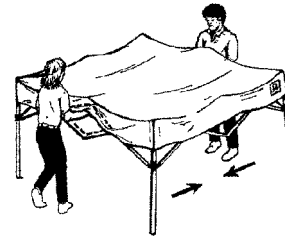

6 Grasp two outer legs, lift and push together to fully close. Be careful not to pinch fingers. DO NOT PUSH HARD! Put on carry bag.

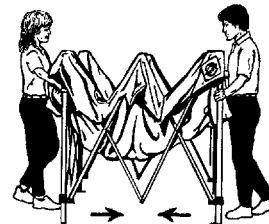

Important Information

IMPORTANT! Read this information before proceeding. It is the user's responsibility to take the following precautions at all times.

- Use caution when handling the E-Z UP® Instant Shelter® folding frame. Avoid pinching hands or fingers as frame opens or closes.
- Always stake or weight down your E-Z UP® Instant Shelter®. Do not use in any potentially windy situations. Immediately take down in any windy conditions.
- Do not leave unattended in windy or rainy weather. Wind and rain can damage the E-Z UP® Instant Shelter® and may also result in injury to you or others. Therefore, do not rely on canopy for protection in heavy or prolonged rain storms.
- Do not use your E-Z UP® Instant Shelter® in a lightning storm.
- The E-Z UP® Instant Shelter® is designed as a temporary shelter. Do not leave up for extended periods.
- Do not leave your E-Z UP® Instant Shelter® unattended.
- Keep all flame and heat sources away from top fabric. Do not build fires within shelter enclosure.

Care and Maintenance

For longer lasting durability and the best possible protection for your E-Z UP® Instant Shelter®, follow these E-Z care and maintenance instructions.

- Use a mild soap (not detergent) and plenty of water for top cleaning.
- Let the E-Z UP® Instant Shelter® top and frame dry completely before closing or storing to avoid mildew.
- Frame will operate and look better if wiped with silicone spray occasionally, especially before and after use in damp conditions. Remove excess silicone residue before applying top.
- Use a seam sealer if top leaks or drips water. Available at most hardware stores.
- Slightly tighten bolts if frame becomes loose.