


How to TAKE DOWN


1. With a partner, depress snap buttons and telescope inner legs into outer legs. Repeat on the opposite legs - making sure to do two legs at a time.



2. Disengage the Auto Slider® at each corner. With one hand pull down on the truss near the slider and depress the snap button. Repeat on all corners.

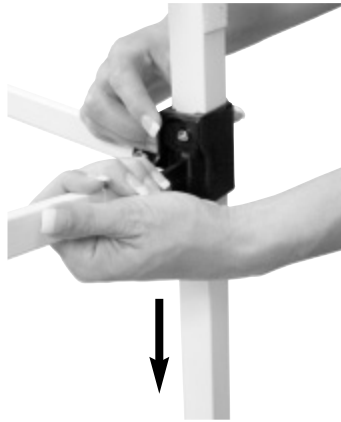

3. Remove top fabric and peak hardware.

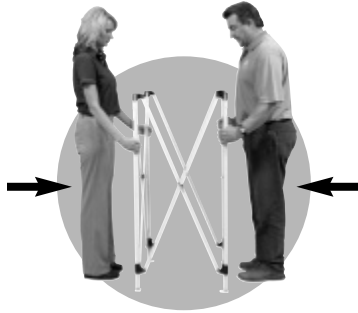

4. With partner on opposite side, grasp two outer legs, slightly lift off the ground, and step forwards. Be careful not to pinch fingers.

CARE & MAINTENANCE

For long lasting durability and the best possible protection for your POP lite, follow these E-Z care and maintenance instructions:

- Use a mild soap (not detergent) and plenty of water for top cleaning.
- Let the top and frame dry completely before closing or storing to avoid mildew. Inner legs must be dry and clean before storing inside outer legs.
- Frame will operate better if occasionally wiped with silicone spray on inner and outer legs, especially before and after use in damp conditions. Remove excess silicone.

IMPORTANT INFORMATION

IMPORTANT! Read this information before proceeding. It is the user's responsibility to take the following precautions at all times.

- Use caution when handling the E-Z UP® folding frame. Avoid pinching hands or fingers as frame opens or closes.
- Always securely stake or weight down your shelter. Wind and rain can damage the POP lite and may also result in injury to you or others. Therefore, do not rely on shelter for protection in heavy or prolonged rain storms.



E-Z UP

WARRANTY

INTERNATIONAL E-Z UP, INC., manufacturer of the E-Z UP® POP lite™, warrants to the original purchaser who provides a dated sales receipt, each part of the E-Z UP® POP lite™ to be free from defects in material or workmanship for a period of two years after the date of original purchase. This warranty applies only for normal and expected uses, as determined by the manufacturer.

www.ezup.com

We Make Life E-Z!™
INTERNATIONAL E-Z UP, INC.

Professional Products Division
1601 Iowa Avenue, Riverside, California 92507
(951) 781-0843 • Fax (951) 781-0586

OWNER'S MANUAL

POP[™]lite



4' x 4'

**Kiosk / Marquee / Half-Peak
Top Assembly**

Take time to learn how to provide years of durable and safe use from your E-Z UP professional product. After reading these instructions carefully, if you have any need of assistance, call our POP lite™ Customer Service Department.



Customer Service Hot Line
(800) 45 SHADE

www.ezup.com

Covered under one or more of the following patents: 4,607,656; 4,924,896; 5,244,001; 5,421,356; 5,485,863; 5,490,533; 5,511,572; 5,632,292; 5,632,293; 5,794,546; 5,797,412; 5,813,425; 5,865,127; 5,921,260; 5,934,301; 6,041,800; 6,070,604; 6,076,312; 6,129,102; 6,138,702; 6,192,910; 6,230,729; 6,240,940; 6,431,193; 6,439,251; 9,570,439; 94/2354; 91/461; 132167; 95/0693; 95/6140; 95/6141; 84107895; 684,978; 2123096; 190486; 289754; 215344; 701077; 2128935; 2949648; 48648; DE 695 10 919 T2; WO96/03561. International Design Registration No. DM/009515 Benelux Design Registration No. 16959-04. Other US and foreign patents pending. © Copyright 2006 International E-Z UP, Inc. USA. All rights reserved. OM.POPLT.KMHP.0706


OV0000706

WHAT'S INCLUDED

- (1) POP lite™ 4'x4' Base Frame , (1) POP lite™ Top
- (4) Straight Peak Tubes OR (4) Angled Peak Tubes

HOW TO SET UP FRAME

1. Place your frame in the center of area to be used. With partner on opposite side, grasp two outer legs, slightly lift off the ground, and step backwards, stopping approximately 1/2 its total size.

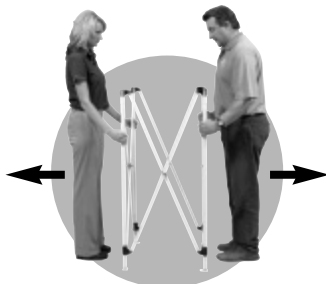

2. Assemble top according to your POP lite top specifications. **See Top Assembly Instructions.**


3. Grasp the bottom of the trusses on opposite sides. Lift up and step backwards until shelter is fully opened, being careful not to pinch fingers.

(kiosk top shown)




4. Engage the Auto Slider® at each corner. With one hand hold the cap on the top of the leg, push up on the slider with the other hand. The snap button will engage in the hole.

Repeat on all corners.

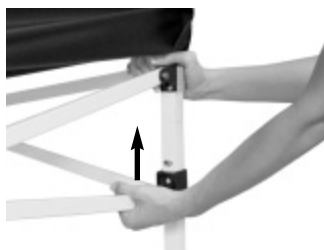

5. Lift the two adjacent outer legs and slide out the inner legs until the snap button locks into the hole in the outer leg. Repeat on the opposite legs - make sure to lower two legs at a time.

(kiosk top shown)

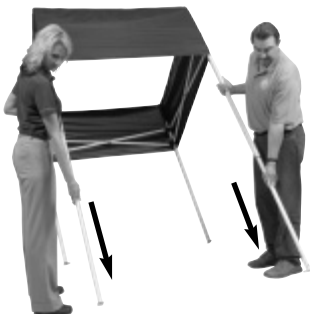


TOP ASSEMBLY INSTRUCTIONS


HOW TO SET UP TOP

1. Complete the frame set up Step 1. Do not open completely in order to reduce the fabric tension during top set up.


2a. (KIOSK TOP) Insert the 3" portion of the straight peak tube into the center hole on the top of the slider. The long portion of the peak tube should be facing toward the **outside corner** of the shelter. Repeat on all corners.

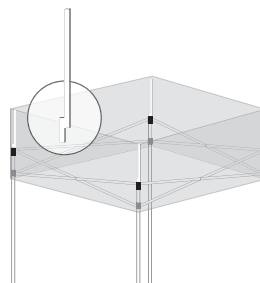

2b. (MARQUEE TOP) Insert the 3" portion of the angled peak tube into the center hole on the top of the slider. The long portion of the peak tube should be facing toward the **outside corner** of the shelter. Repeat on all corners.

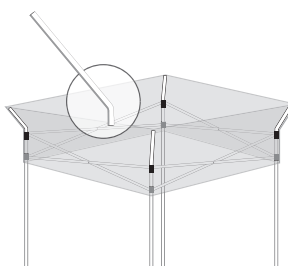

2c. (HALF-PEAK TOP) Insert the 3" portion of the angled peak tube into the center hole on the top of the slider. The long portion of the kiosk tube should be facing toward the **inside corner** of the shelter. Repeat on all corners.

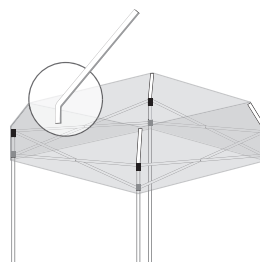

3. Gently unfold the fabric top. Place the fabric in the center of the shelter and work out from the inside. Slide the interior corner pocket onto the peak tube and repeat on all corners. Secure the top to the frame by pushing the quick attachment strips together at each corner. (kiosk top shown)

4. Continue frame set up.



ACCESSORY INSTRUCTIONS

HOW TO SET UP RAILSKIRT


1. Once the shelter is completely set up, slide the beam wire into the top sleeve of the rail-skirt fabric .



2. Insert one beam wire end into the hole on the outer leg of the shelter just above the snap button of the telescoping leg.



3. Place the other side of the beam wire end into the slot on the opposite leg and push down firmly until the beam wire is securely seated into place. Secure fabric with attachment straps around the leg.

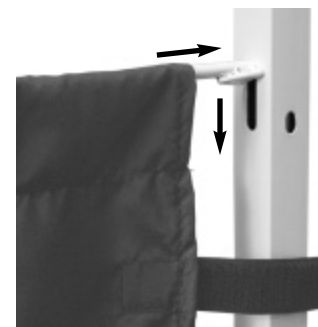


[To remove, repeat steps in reverse order.]

HOW TO SET UP SIDEWALL

Attach sidewall to frame as shown.

1. Wrap the long attachment straps around truss. The top of the sidewall tucks underneath the valance of the top fabric.

2. Wrap short attachment straps around the legs.

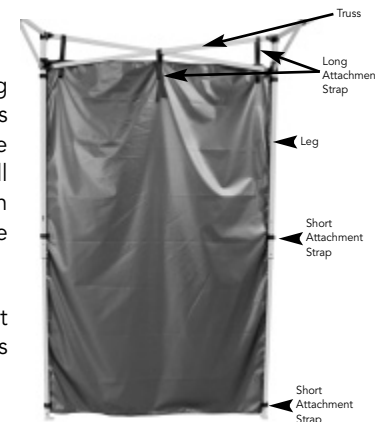

[To remove, repeat steps in reverse order.]