

# IMPORTANT INFORMATION

**IMPORTANT!** Read this information before proceeding. It is the user's responsibility to take the following precautions at all times.

- Always stake or weight down your E-Z UP®. Do not use in any potentially windy or rainy weather. Wind and rain can damage the E-Z UP® Instant Shelter® and may also result in injury to you or others. Therefore, do not rely on shelter for protection in heavy or prolonged rain storms.
- The E-Z UP® Instant Shelter® is designed as a temporary shelter. Do not leave up for extended periods.
- Use caution when handling the E-Z UP® folding frame. Avoid pinching hands or fingers as frame opens or closes.
- Do not use shelter in a lightning storm.
- Do not leave your E-Z UP® Instant Shelter® unattended.
- Do not build fires within shelter enclosure.

**WARNING:** Keep all flame and heat sources away from this top fabric. This top meets the flammability requirements of CPAI-84. The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the tent may render the flame-resistant properties ineffective.

# CARE AND MAINTENANCE

For long lasting durability and the best possible protection for your E-Z UP® Instant Shelter®, follow these E-Z care and maintenance instructions:

- Use a mild soap (not detergent) and plenty of water for top cleaning.
- Let the E-Z UP® top and frame dry completely before closing or storing to avoid mildew.
- Frame will operate and look better if occasionally wiped with silicone spray, especially before and after use in damp conditions. Remove excess silicone residue before applying top.
- Use a seam sealer if top leaks or drips water. Available at most sporting goods and hardware stores.
- Slightly tighten bolts if frame becomes loose.

For online warranty, service, parts and accessories as E-Z as 1-2-click, contact us at

[www.ezup.com](http://www.ezup.com)

Ask about our other E-Z UP® Instant Products™

Covered under one or more of the following patents: 4,607,656; 4,924,896; 5,244,001; 5,421,356; 5,485,863; 5,490,533; 5,511,572; 5,632,292; 5,632,293; 5,794,546; 5,797,412; 5,865,127; 5,921,260; 5,934,301; 6,041,800; 6,070,604; 6,076,312; 6,129,102; 6,230,729; 6,240,940; 6,431,193; 6,439,251; 6,601,599; 95-704390; 94/2354; 91461; 132167; 95/0693; 95/6140; 95/6141; 84107895; 684,978; 2123096; 190486; 289754; 215344; 701077; 2128935; 2949648; 48648; DE 695 10 919 12; W096/03561. International Design Registration No. DM/009515. Benelux Design Registration No.16959-04. Other US and Foreign patents pending. © Copyright 2006 International E-Z UP, Inc. All rights reserved.

SES125LBU6 R00 OVO28



## 2 YEAR WARRANTY

INTERNATIONAL E-Z UP, INC., manufacturer of the E-Z UP® Instant Shelter®, warrants to the original purchaser who provides a dated sales receipt, each part of the E-Z UP® Instant Shelter® to be free from defects in material or workmanship for a period of two years after the date of original purchase. The E-Z UP® REGENCY™ frame is covered under a limited two year warranty and guarantees the frame to be free from defects in material or workmanship. This warranty applies only for normal and expected uses, as determined by the manufacturer. INTERNATIONAL E-Z UP, INC.'s obligation and liability under this warranty is limited to the repair or replacement (at its option) of the product or its parts, after its own review and examination.

**RETURN ADVISORY** - Before returning any part or product to INTERNATIONAL E-Z UP, INC. or its designated representative, please phone or write to obtain specific return shipping instructions. All shipping costs must be prepaid, and INTERNATIONAL E-Z UP, INC. is not responsible for products damaged in transit.

**CONDITIONS** - This warranty shall be void as to any product which has been altered or modified in any manner. This warranty does not apply to damages caused by wind, rain, or other forces of nature, not to accidental or deliberated damage of the product, nor to use of the product that does not conform with the product instructions.

This warranty is provided in lieu of all other warranties, expressed or implied.

**We Make Life E-Z!™**  
**INTERNATIONAL E-Z UP, INC.**

1650 Iowa Avenue Ste. 200, Riverside, California 92507

(909) 426-0060 • Fax (909) 426-0063

[www.ezupdirect.com](http://www.ezupdirect.com)

Customer Service Hot Line

**800-SHADE ME**

7 4 2 3 3 6 3

OWNER'S MANUAL

# E-Z UP® INSTANT SHELTER®



**"Sets Up in Seconds!™"**

**REGENCY™**

**12' x 12'**

Take time to learn how to provide years of durable and safe use from your E-Z UP® Instant Shelter®. After reading these instructions carefully, if you have any need of assistance, call our Customer Service Department.



**Customer Service Hot Line**

**(800) SHADE ME**

7 4 2 3 3 6 3

[www.ezupdirect.com](http://www.ezupdirect.com)

# WHAT'S IN THE BOX


Please read each step before you attempt to set up.  
Save these instructions for future reference.

- REGENCY™ Frame
- Polyester Top
- Roller Bag
- 4 Piece Stake Kit

# HOW TO SET UP

**\*Note: First time top attachment is required.**

Top and frame are shipped unattached to avoid damage. The first time you set up your Instant Shelter®, the top must be attached to the frame with hook & loop strips. Once top is attached, set up and take down are easily accomplished within seconds.

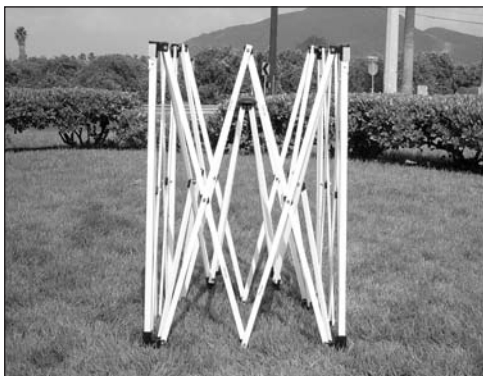

**1.** Place your E-Z UP® frame in the center of area to be shaded. With partner on opposite side, grasp outer legs, slightly lift off the ground and step backwards, stopping at full arms length.



**\*2.** Gently unfold the fabric top and place it over the open frame.



**\*3.** Secure the top to the frame by pulling the valance down and matching hook and loop strips on the top with the strips on the frame. Press firmly together at each corner.



**4.** Grasp the top and bottom of diamond-shaped area of trusses by "open" sticker. Slightly lift shelter up and push hands together while stepping backwards until shelter is fully opened. **Be careful not to pinch fingers or pull backwards too hard as trusses will bend.**



**5.** Engage auto-slider at each corner by pushing up on slider with one hand while pushing down on top of leg with other hand until pull pin engages. Pull down hem of top and repeat on other legs.




**6.** Lift two adjacent outer legs and pull out inner legs until snap button locks. Lift remaining outer legs and pull out inner legs until snap button locks. **Use stakes or weight bags to secure in breezy conditions.**

**\*NOTE:** ONCE TOP IS PERMANENTLY ATTACHED, ONLY PERFORM STEP 1 AND 4-6.

# HOW TO TAKE DOWN



**1.** With a partner, lift two adjacent outer legs slightly, depress snap button and telescope inner legs into outer legs. Lift remaining outer legs, depress snap button and telescope inner legs into outer legs.

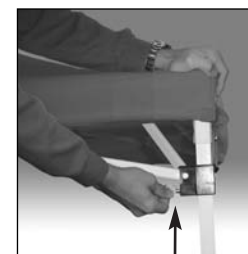

Pull pin

**2.** Release the pull pin at each corner by first lifting hem of top. With one hand, push up on the truss near the pull pin, pull the pin out to release.



**3.** With partner on opposite side, grasp top and bottom of diamond-shaped area of trusses by "close" sticker and slightly lift up. Shake shelter slightly, pulling hands apart, while stepping towards partner until shelter is 3/4 closed.



**4.** Grasp adjacent outer legs and push shelter together until fully closed. **Be careful not to pinch fingers!** Store shelter in roller bag.