



What's In The Box

Please read each step before you attempt to set up. Save these instructions for future reference. Return the Warranty Card within 10 days of purchase.


- 1 Sports Dome™ Frame Fully Assembled
- 1 Carry Bag
- 1 Sports Dome™ Top (with attachment hooks)
- 4 Piece Stake Kit

How To Set Up


Important: The first time you set up your Sports Dome™, the top must be hooked onto the frame. After performing Step 1 below, unfold the Sports Dome™ top and drape over partially opened frame. Locate the attachment hook on each corner of the Sports Dome™ top and clip into the hole located on frame just below corner caps on each leg (See Illustration below). Continue with steps 2-7.

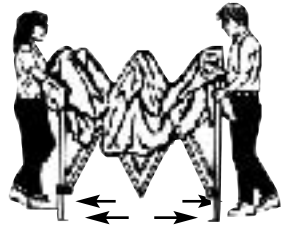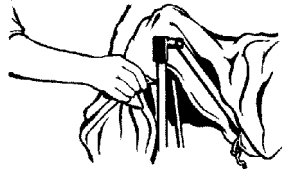


1. Place E-Z UP® in center of area to be sheltered. Remove cover bag. With partner on opposite side, grasp two outer legs, slightly lift off ground and step backwards, stopping at full arms' length.

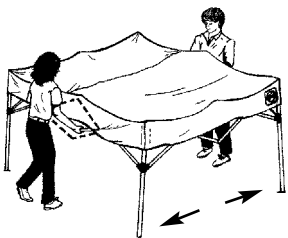


2. Grasp the top and bottom of diamond-shaped area of trusses. Slightly lift shelter up and push hands together while stepping backwards until shelter is fully opened. Be careful not to pinch fingers or pull backwards too hard as trusses will bend.

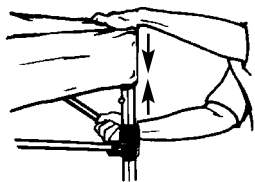


3. Engage auto slider at each corner by pushing up on slider with one hand while pushing down on top of leg with other hand. Snap button will engage in hole. Repeat step on remaining legs.

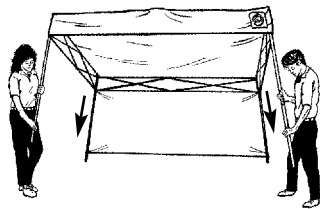

 
4. Lift two adjacent outer legs and pull out inner legs until snap button locks.




5a. Before adjusting other legs: stand under shelter and locate flex rod sets clipped to inside of trusses. Remove flex rod sets from clips. Lengthen flex rod by connecting rods at center metal divider.

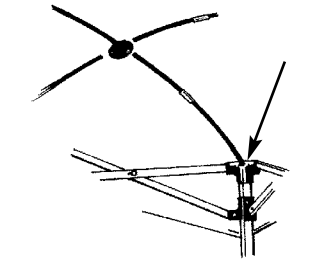


5b. Firmly insert end of flex rod that is attached to frame in plastic corner bracket holes. Upon insertion, all four rods should point at each other.

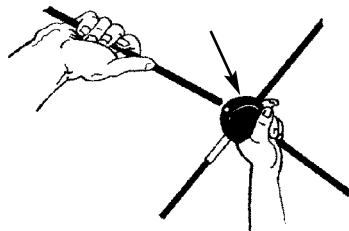


6. Locate flex rod with center hub attached to end. Connect other three flex rods into center hub. Be sure all flex rods are fully inserted into both the center hub and the corner plastic leg caps.

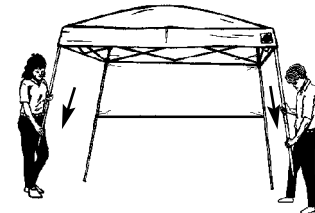


7. Lift up the remaining two outer legs and pull out inner legs until snap button locks. Secure attached shade panel at desired location. Use stakes to secure in windy conditions.

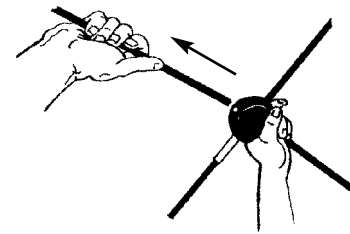


2. Before adjusting other legs, detach three flex rods from the center hub, remembering one rod remains attached to hub. Pull out rods from corner bracket holes. Disconnect each rod set at center metal divider, fold flex rod in half, and clip free end of rod into retaining clips located on the trusses.

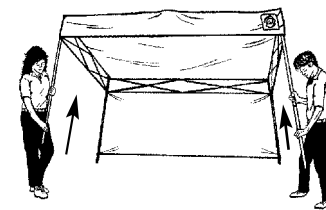


3. Lower remaining legs. Fold shade panel up and place on top of shelter.

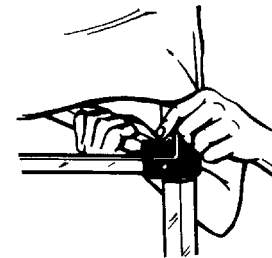

4. Release auto slider at all four corners by slightly lifting up on slider with one hand while depressing snap button with other hand. Once snap button is depressed, push slider down past snap button.

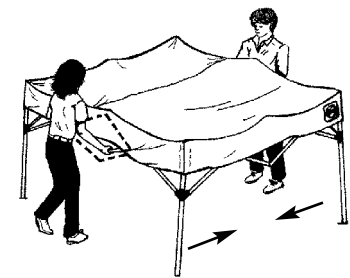


5. With partner on opposite side, grasp top and bottom of diamond-shaped area of trusses and slightly lift up. Shake shelter a little, pulling hands apart, while stepping towards partner until shelter is 3/4 closed.

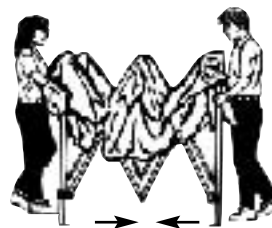

6. Grasp adjacent outer legs and push shelter together until fully closed. Be careful not to pinch fingers! Do not push hard. Put cover bag over shelter.

How To Take Down

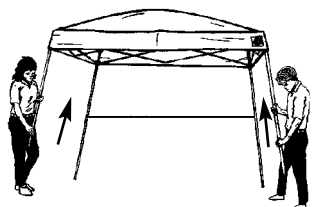

1. Disconnect shade panel. With a partner, lift adjacent outer legs slightly, depress snap button and telescope inner legs into outer legs.

Important Information

IMPORTANT! Read this information before proceeding. It is the user's responsibility to take the following precautions at all times.

- Use caution when handling the E-Z UP® folding frame. Avoid pinching hands or fingers as frame opens or closes.
- Always stake or weight down your E-Z UP®. Do not use in any potentially windy or rainy weather. Wind and rain can damage the E-Z UP® Sports Dome™ and may also result in injury to you or others. Therefore, do not rely on shelter for protection in heavy or prolonged rain storms.
- Do not use shelter in a lightning storm.
- The E-Z UP® Sports Dome™ is designed as a temporary shelter. Do not leave up for extended periods.
- Do not leave your E-Z UP® Sports Dome™ unattended.
- Keep all flame and heat sources away from top fabric. Do not build fires within shelter enclosure.

Care and Maintenance

For long lasting durability and the best possible protection for your E-Z UP® Sports Dome™, follow these E-Z care and maintenance instructions:

- Use a mild soap (not detergent) and plenty of water for top cleaning.
- Let the E-Z UP® top and frame dry completely before closing or storing to avoid mildew.
- Frame will operate and look better if occasionally wiped with silicone spray, especially before and after use in damp conditions. Remove excess silicone residue before applying top.
- Use a seam sealer if top leaks or drips water. Available at most hardware stores.
- Slightly tighten bolts if frame becomes loose.

Customer Service Hot Line
(800) 235-5637