

# IMPORTANT INFORMATION

**IMPORTANT!** Read this information before proceeding. It is the user's responsibility to take the following precautions at all times.

- Always stake or weight down your E-Z UP®. Do not use in any potentially windy or rainy weather. Wind and rain can damage the E-Z UP® Instant Shelter® and may also result in injury to you or others. Therefore, do not rely on shelter for protection in heavy or prolonged rain storms.
- The E-Z UP® Instant Shelter® is designed as a temporary shelter. Do not leave up for extended periods.
- Use caution when handling the E-Z UP® folding frame. Avoid pinching hands or fingers as frame opens or closes.
- Do not use shelter in a lightning storm.
- Do not leave your E-Z UP® Instant Shelter® unattended.
- Keep all flame and heat sources away from fabric top. Do not build fires within shelter enclosure.

# CARE AND MAINTENANCE

For long lasting durability and the best possible protection for your E-Z UP® Instant Shelter®, follow these E-Z care and maintenance instructions:

- Use a mild soap (not detergent) and plenty of water for top cleaning.
- Let the E-Z UP® top and frame dry completely before closing or storing to avoid mildew.
- Frame will operate and look better if occasionally wiped with silicone spray, especially before and after use in damp conditions. Remove excess silicone residue before applying top.
- Use a seam sealer if top leaks or drips water. Available at most sporting goods and hardware stores.
- Slightly tighten bolts if frame becomes loose.

**For online warranty, service, parts and accessories as E-Z as 1-2-click, contact us at**

**[www.ezup.com](http://www.ezup.com)**

**Ask about our other E-Z UP® Instant Products™**

Covered under one or more of the following patents: 4,607,656; 4,924,896; 5,244,001; 5,421,356; 5,485,863; 5,490,533; 5,511,572; 5,632,292; 5,632,293; 5,794,546; 5,797,412; 5,813,425; 5,865,127; 5,921,260; 5,934,301; 6,041,800; 6,070,604; 6,076,312; 6,129,102; 6,138,702; 6,192,910; 6,230,729; 6,240,940; 6,431,193; 6,439,251; 9,570,439; 94/2354; 91461; 132167; 95/0693; 95/6140; 95/6141; 84107895; 684,976; 2123096; 190486; 289754; 215344; 701077; 2128935; 2949648; 48648; DE 695 10 919 T2; W096/03561. International Design Registration No. DM/009515 Benelux Design Registration No. 16959-04. Other US and foreign patents pending. © Copyright 2003 International E-Z UP, Inc. USA. All rights reserved. OVO08-1002



## PRODUCT WARRANTY

INTERNATIONAL E-Z UP, INC., manufacturer of the E-Z UP® Instant Shelter™, warrants to the original purchaser who provides a dated sales receipt, each part of the E-Z UP® Instant Shelter™ to be free from defects in material or workmanship for a period of **TWO YEARS** after the date of original purchase. This warranty applies only for normal and expected uses, as determined by the manufacturer. INTERNATIONAL E-Z UP, INC.'s obligation and liability under this warranty is limited to the repair or replacement (at its option) of the product or its parts, after its own review and examination.

**RETURN ADVISORY** - Before returning any part or product to INTERNATIONAL E-Z UP, INC. or its designated representative, please phone or write to obtain specific return shipping instructions. All shipping costs must be prepaid, and INTERNATIONAL E-Z UP, INC. is not responsible for products damaged in transit.

**CONDITIONS** - This warranty shall be void as to any product which has been altered or modified in any manner. This warranty does not apply to damages caused by wind, rain, or other forces of nature, not to accidental or deliberate damage of the product, nor to use of the product that does not conform with the product instructions.

This express warranty is provided in lieu of all other warranties, expressed or implied.

**We Make Life E-Z!™**

**INTERNATIONAL E-Z UP, INC.**

1650 Iowa Avenue, Suite 200, Riverside, California 92507

(951) 426-0060 • Fax (951) 426-0063

[www.ezup.com](http://www.ezup.com)


Customer Service Hot Line

**800-SHADE ME**

7 4 2 3 3 6 3

OWNER'S MANUAL

**E-Z UP®**  
**INSTANT SHELTER®**

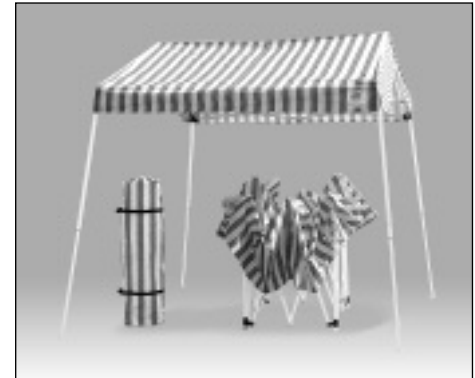

**"Sets Up in Seconds!"™**

**ESCORT®**

**9' x 9' and 10' x 10'**

Take time to learn how to provide years of durable and safe use from your E-Z UP® Instant Shelter®. After reading these instructions carefully, if you have any need of assistance, call our Customer Service Department.



**Customer Service Hot Line**

**(800) SHADE ME**

7 4 2 3 3 6 3

[www.ezup.com](http://www.ezup.com)

# WHAT'S IN THE BOX

Please read each step before you attempt to set up. Save these instructions for future reference.

- 1 - Escort® Frame
- 1 - Carry Bag
- 1 - Fabric Top
- 4 Piece Stake Kit

# How To SET UP

## Important: First time attachment is required.


Top and frame are shipped unattached to avoid damage. The first time you set up your Instant Shelter®, the top must be attached to the frame with Velcro®. This first time set up will take longer than future set ups. Once top is attached, set up and take down are easily accomplished within seconds.




**1.** Place your E-Z UP® frame in the center of area to be sheltered. With partner standing on opposite side of frame, the tallest trusses should be in front of you. Grasping two outer legs, slightly lift frame off ground and step backwards, stopping at full arms' length.



**2.** Unfold the top and drape over partially opened frame. Place the peaked side of the valance on the side with the tallest trusses. Match Velcro® strips on the top with the Velcro® strips located just below the corner caps on each leg (see photo). Push the Velcro® firmly together

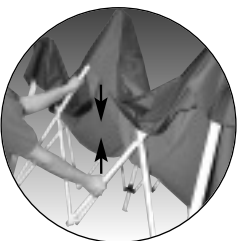

**3.** Grasp the top and bottom of diamond-shaped area of trusses. Slightly lift shelter up and push hands together while stepping backwards until shelter is fully opened. **Be careful not to pinch fingers or pull backwards too hard as trusses will bend.**

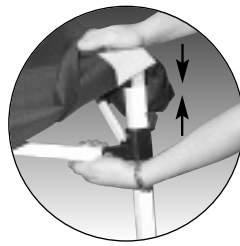


**4.** Check auto slider at each corner to make sure snap button has engaged. If snap button and auto slider are not engaged push up on slider with one hand while pushing down on top of leg with the other hand. Snap button will engage in hole. Repeat step on remaining legs.



**5. Note: This step applies to the 10' unit only.** Support arm should be engaged by seating the mounting bracket firmly between the two sidewall washers.




**6.** Lift two adjacent outer legs and pull out inner legs until snap button locks.

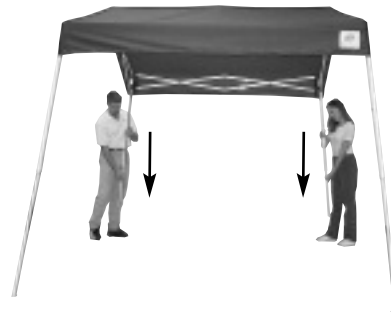


**7.** Lift up the remaining two outer legs and lower inner legs until snap button locks. Use stakes to secure in windy conditions.


# How To TAKE DOWN

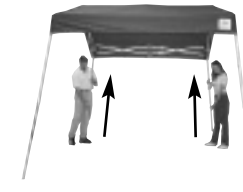

**1.** With a partner, lift adjacent outer legs up 1", depress snap button and telescope inner legs into outer legs.

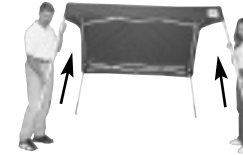


**2.** Lower remaining legs, by telescoping inner legs into outer legs.

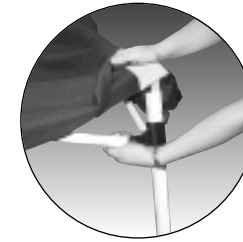

**3. Note: This step applies to the 10' unit only.** Remove the support arm by lifting the mounting bracket from between the two washers and let it hang freely from the peak truss.



**4.** Release auto slider at each corner by first lifting hem of top. With one hand, push up on truss near slider to remove the weight of the shelter from snap button. Depress snap button and push slider down.

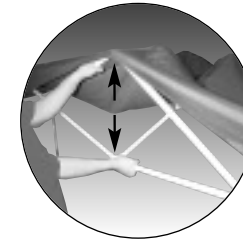

**5.** With partner on opposite side, grasp top and bottom of diamond-shaped area of trusses and slightly lift up. Shake shelter slightly, pulling hands apart, while stepping towards partner until shelter is 3/4 closed.



**6.** Grasp adjacent outer legs and push shelter together until fully closed. **Be careful not to pinch fingers!** Store shelter in carry bag.