

5. Grasp top of diamond through the window and slightly lift up. Shake shelter slightly, pulling hands apart until unit is 3/4 closed. Leave frame partially open to place sidewall material in the center of frame for E-Z storage.



6. Grab all loose sidewall fabric and push down into the center of the partially closed frame. Push unit together until fully closed. Be careful not to pinch fingers.



7. Turn unit upside down so that the legs face skyward. Fit shoulder back pack over unit and turn back over. Cinch drawstring closed.

IMPORTANT INFORMATION

IMPORTANT! Read this information before proceeding. It is the user's responsibility to take the following precautions at all times.

- Use caution when handling the E-Z UP® folding frame. Avoid pinching hands or fingers as frame opens or closes.
- Always stake or weight down your E-Z UP®. Do not use in any potentially windy or rainy weather. Wind, rain and snow can damage the E-Z UP® Instant Blind™ and may also result in injury to you or others. Therefore, do not rely on shelter for protection in heavy or prolonged rain or snow storms.
- Do not use your Instant Blind™ in a lightning storm.
- The E-Z UP® Instant Blind™ is designed for temporary use. Do not leave up for extended periods.
- Do not leave your E-Z UP® Instant Blind™ unattended.
- Keep all flame and heat sources away from fabric top. Do not build fires within shelter or near shelter.

CARE AND MAINTENANCE

For long lasting durability and the best possible protection for your E-Z UP® Instant Blind™, follow these E-Z care and maintenance instructions:

- Use a mild soap (not detergent) and plenty of water for top cleaning.
- Let the E-Z UP® top and frame dry completely before closing or storing to avoid mildew.
- Frame will operate and look better if occasionally wiped with silicone spray, especially before and after use in damp conditions. Remove excess silicone residue before applying top.
- Use a seam sealer if top leaks or drips water. Available at most hardware or sporting goods stores.
- Slightly tighten bolts if frame becomes loose.

For online warranty, service, parts and accessories as E-Z as 1-2-click, contact us at

www.ezup.com

Ask about our other E-Z UP® Instant Products™

Covered under one or more of the following patents: 4,607,656; 4,924,896; 5,244,001; 5,421,356; 5,485,863; 5,490,533; 5,511,572; 5,632,292; 5,632,293; 5,794,546; 5,797,412; 5,813,425; 5,865,127; 5,921,260; 5,934,301; 6,041,800; 6,070,604; 6,076,312; 6,129,102; 6,138,702; 6,192,910; 6,230,729; 6,240,940; 9,570,439; 94/2354; 91461; 132167; 95/0693; 95/6140; 95/6141; 84107895; 684,978; 2123096; 190486; 289754; 215344; 701077; 2128935; 2949648; 48648; DE 695 10 919 12; WO96/03561. International Design Registration No. DM/009515 Benelux Design Registration No. 16959-04. Other US and foreign patents pending. © Copyright 2001 International E-Z UP, Inc. USA. All rights reserved. U008-1001



PRODUCT

WARRANTY

INTERNATIONAL E-Z UP, INC., manufacturer of the E-Z UP® Instant Blind™, warrants to the original purchaser who provides a dated sales receipt, each part of the E-Z UP® Instant Blind™ to be free from defects in material or workmanship for a period of one year after the date of original purchase. This warranty applies only for normal and expected uses, as determined by the manufacturer. INTERNATIONAL E-Z UP, INC.'s obligation and liability under this warranty is limited to the repair or replacement (at its option) of the product or its parts, after its own review and examination.

RETURN ADVISORY - Before returning any part or product to INTERNATIONAL E-Z UP, INC. or its designated representative, please phone or write to obtain specific return shipping instructions. All shipping costs must be prepaid, and INTERNATIONAL E-Z UP, INC. is not responsible for products damaged in transit.

CONDITIONS - This warranty shall be void as to any product which has been altered or modified in any manner. This warranty does not apply to damages caused by wind, rain, or other forces of nature, nor to accidental or deliberate damage of the product, nor to use of the product that does not conform with the product instructions.

This express warranty is provided in lieu of all other warranties, expressed or implied.


We Make Life E-Z!™
INTERNATIONAL E-Z UP, INC.

Corporate and Manufacturing Headquarters
1601 Iowa Avenue, Riverside, California 92507
(909) 426-0060 • Fax (909) 426-0063

www.ezup.com
Customer Service Hot Line
800-SHADE ME
7 4 2 3 3 6 3

OWNER'S MANUAL

E-Z UP®
INSTANT SHELTER®

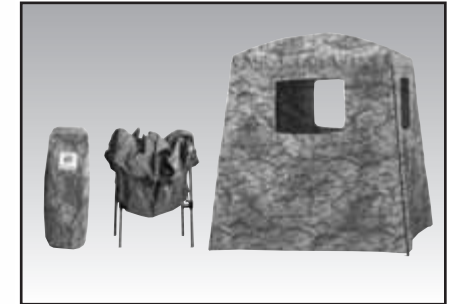

"Sets Up in Seconds!™"

INSTANT BLIND™
5' x 5'

Take time to learn how to provide years of durable and safe use from your E-Z UP® Instant Blind™. After reading these instructions carefully, if you have any need of assistance, call our Customer Service Department.



Customer Service Hot Line
800-SHADE ME
7 4 2 3 3 6 3
www.ezup.com


WHAT'S IN THE BOX

Please read each step before you attempt to set up. Save these instructions for future reference.


- 1 - 5' x 5' Instant Blind™ Frame
- 1 - Instant Blind™ Top
- 1 - 4-Sided Wrap-Around Sidewall
- 1 - Carry Bag / Back Pack
- 2 - Stake Kits

HOW TO SET UP


Important: Top, sidewalls and frame are shipped unattached to avoid damage. A first time set up requires that the top and sidewalls be attached to the frame. This first time set up takes longer than future set ups. Once top and sidewalls are attached to frame, set up and take down are easily accomplished within seconds.

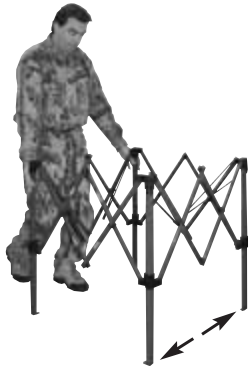


1. Place your E-Z UP® frame in the center of area to be sheltered. Grasp two outer legs, slightly lift off ground and step backwards, stopping at full arms' length.

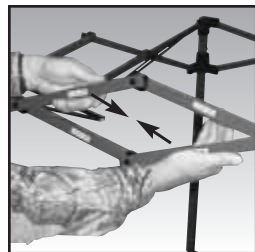

2. Grasp the top and bottom of diamond-shaped area of trusses. Slightly lift shelter up and push hands together while stepping backwards until shelter is fully opened. Be careful not to pinch fingers or pull backwards too hard as trusses will bend.

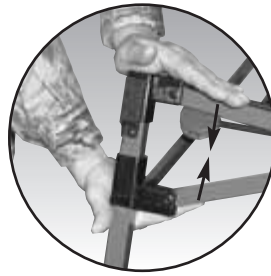


3. Engage auto slider at each corner by pushing up on slider with one hand while pushing down on top of leg with other hand. Snap button will engage in hole. Repeat step on remaining legs.

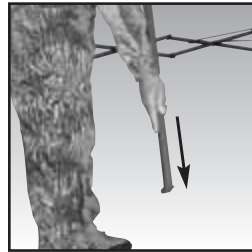


4. Lift outer legs and pull out inner legs until snap button locks. Repeat on remaining legs.



5. Enter the E-Z UP® and remove flex rod from retaining clips. Place rods firmly in outer leg caps. Connect rods to the center hub.

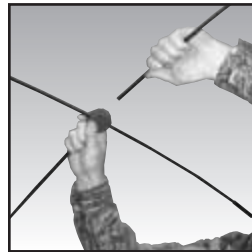


***6.** To attach sidewall, make sure that the sidewall is unzipped and that the Velcro® straps are toward the top of the Instant Blind™. From outside the shelter, attach sidewall to corner of outer leg cap by wrapping Velcro® strap around the flex rod and outer leg cap and press Velcro® firmly together. Make sure that top of sidewall seam rests just below corner Velcro® on outer leg cap.

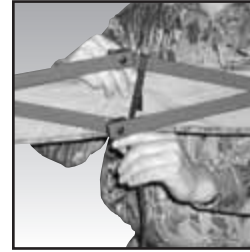

***7.** Attach middle Velcro® strap over middle truss by wrapping Velcro® strap around trusses and firmly press Velcro® together. Repeat steps all the way around the E-Z UP® Instant Blind™ until the two zippered ends meet. Connect the ends of the four-paneled sidewall by partially zipping the sidewall. Zip about 3" so that that zipper can be completed from the inside.




***8.** Unfold the top and attach the top to the frame by matching Velcro® strips on the top with the Velcro® strips located on the outer leg caps. Use stakes to secure in windy conditions.

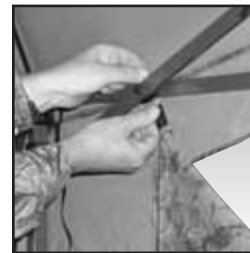

9. From inside of the E-Z UP® unit, attach window flaps by simply hooking J hook behind outside truss at truss intersection points. Repeat on remaining window flaps.

***Note:** Once top is permanently attached only perform steps 1-5 and 9.


HOW TO TAKE DOWN

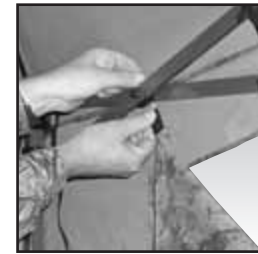

1. From inside of the E-Z UP® Instant Blind™, open window flaps by unhooking the J hooks from trusses. Let window flaps hang freely inside. Repeat on remaining windows.



2. Disconnect rods from the center hub, fold and clip rods to the retaining clips.

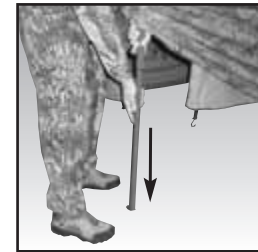

3. Unzip corner sidewall to exit unit. From outside of the unit, lower legs by telescoping inner legs into outer legs.



4. Release auto slider at each corner by first lifting hem of top and reaching inside of E-Z UP®. With one hand push up on truss near slider, depress snap button. **Note:** It is much easier to depress snap button when the shelter weight has been removed from the snap button.