

WHAT'S IN THE BOX

Please read each step before you attempt to set up. Save these instructions for future reference. Return the Warranty Card within 10 days of purchase.

- 1 - 10' Escort™ Frame
- 1 - Cover Bag
- 1 - Fabric Top
- 4 Piece Stake Kit


HOW TO SET UP

Important: First time attachment is required.


Top and frame are shipped separately to avoid damage. The first time you set up your Instant Shelter®, the top must be attached to the frame with Velcro®. Once top is attached, set up and take down are easily accomplished within seconds. After performing Step 1 below, unfold the top and drape over partially opened frame. Match Velcro® strips located just below the corner caps on each leg (See photo). Push the Velcro® firmly together. Continue with steps 2-7.



1. Place your E-Z UP® frame in the center of area to be sheltered. With partner standing on opposite side of frame, the tallest trusses should be in front of you. Grasping two outer legs, slightly lift frame off ground and step backwards, stopping at full arms' length.

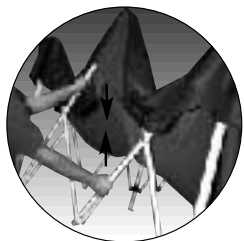

2. Grasp the top and bottom of diamond-shaped area of trusses. Slightly lift shelter up and push hands together while stepping backwards until shelter is fully opened. **Be careful not to pinch fingers or pull backwards too hard as trusses will bend.**

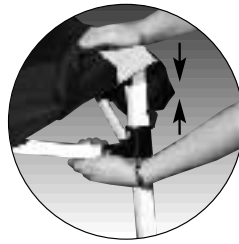

3. Check auto slider at each corner to make sure snap button has engaged. If snap button and auto slider are not engaged push up on slider with one hand while pushing down on top of leg with the other hand. Snap button will engage in hole. Repeat step on remaining legs.




4. Lift two adjacent outer legs and pull out inner legs until snap button locks.




5. Lift up the remaining two outer legs and pull out inner legs until snap button locks. Use stakes to secure in windy conditions.

How To TAKE DOWN

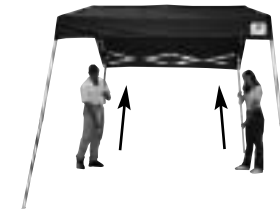


1. With a partner, lift adjacent outer legs up 1", depress snap button and telescope inner legs into outer legs.

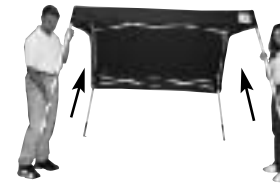

2. Lower remaining legs, by telescoping inner legs into outer legs.



3. Release auto slider at all four corners by slightly pushing up on truss near slider, depress snap button and push slider down past snap button. **Note:** It is much easier to depress the snap button when the shelter weight has been removed from the snap button.

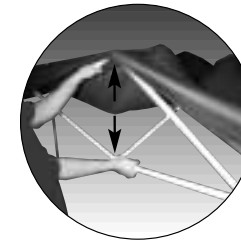

4. With partner on opposite side, grasp top and bottom of diamond-shaped area of trusses and slightly lift up. Shake shelter slightly, pulling hands apart, while stepping towards partner until shelter is 3/4 closed.



5. Grasp adjacent outer legs and push shelter together until fully closed. **Be careful not to pinch fingers! Do not push hard.** Put cover over shelter.